


Window Net Mounting Kit Installation Instructions

P/N C1080

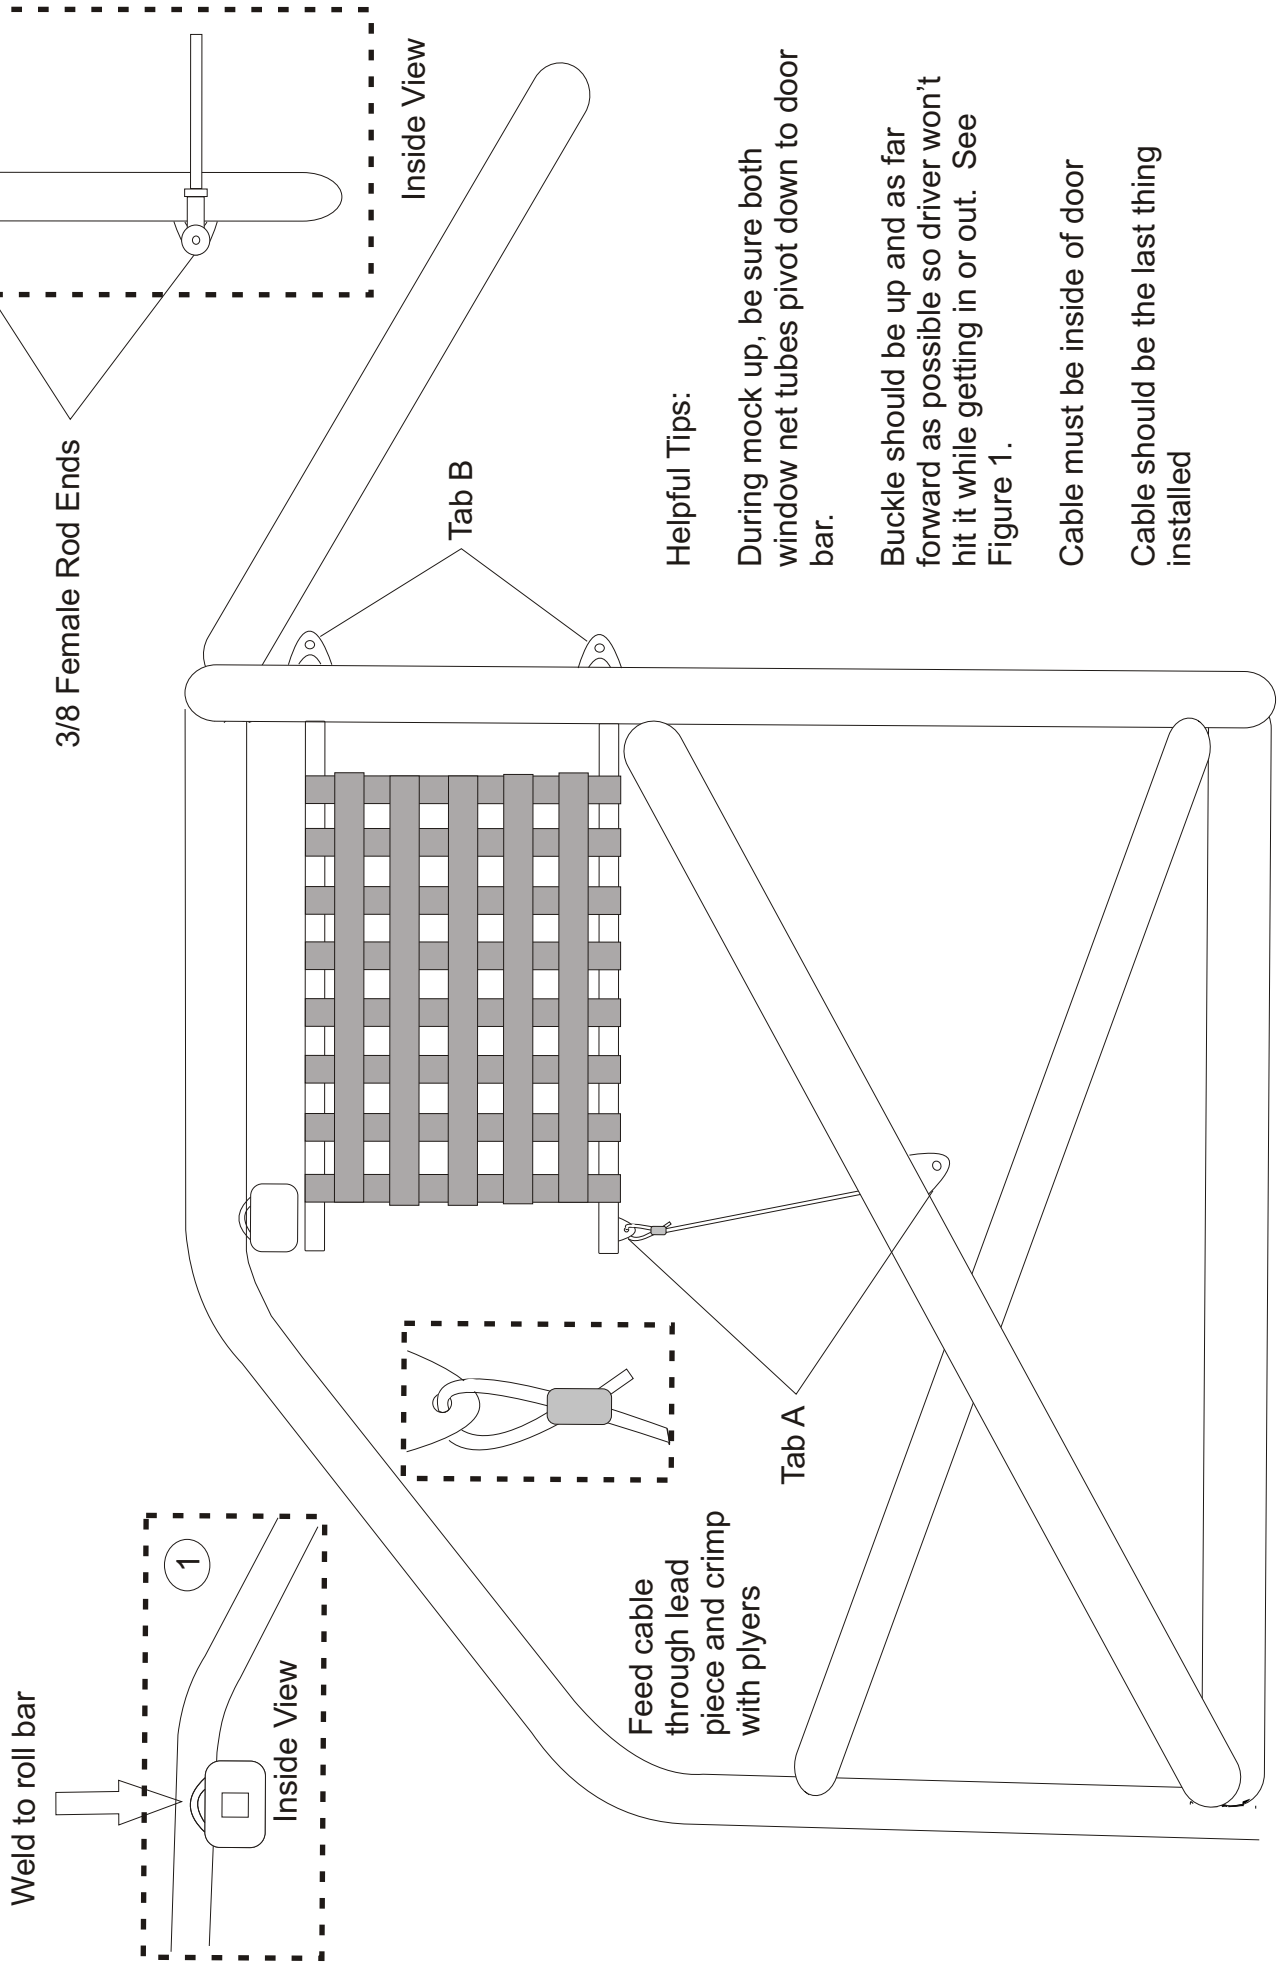

Helpful Tips:

- During mock up, be sure both window net tubes pivot down to door bar.
- Buckle should be up and as far forward as possible so driver won't hit it while getting in or out. See Figure 1.
- Cable must be inside of door
- Cable should be the last thing installed