


Window Net Mounting Kit Installation Instructions

P/N C1090

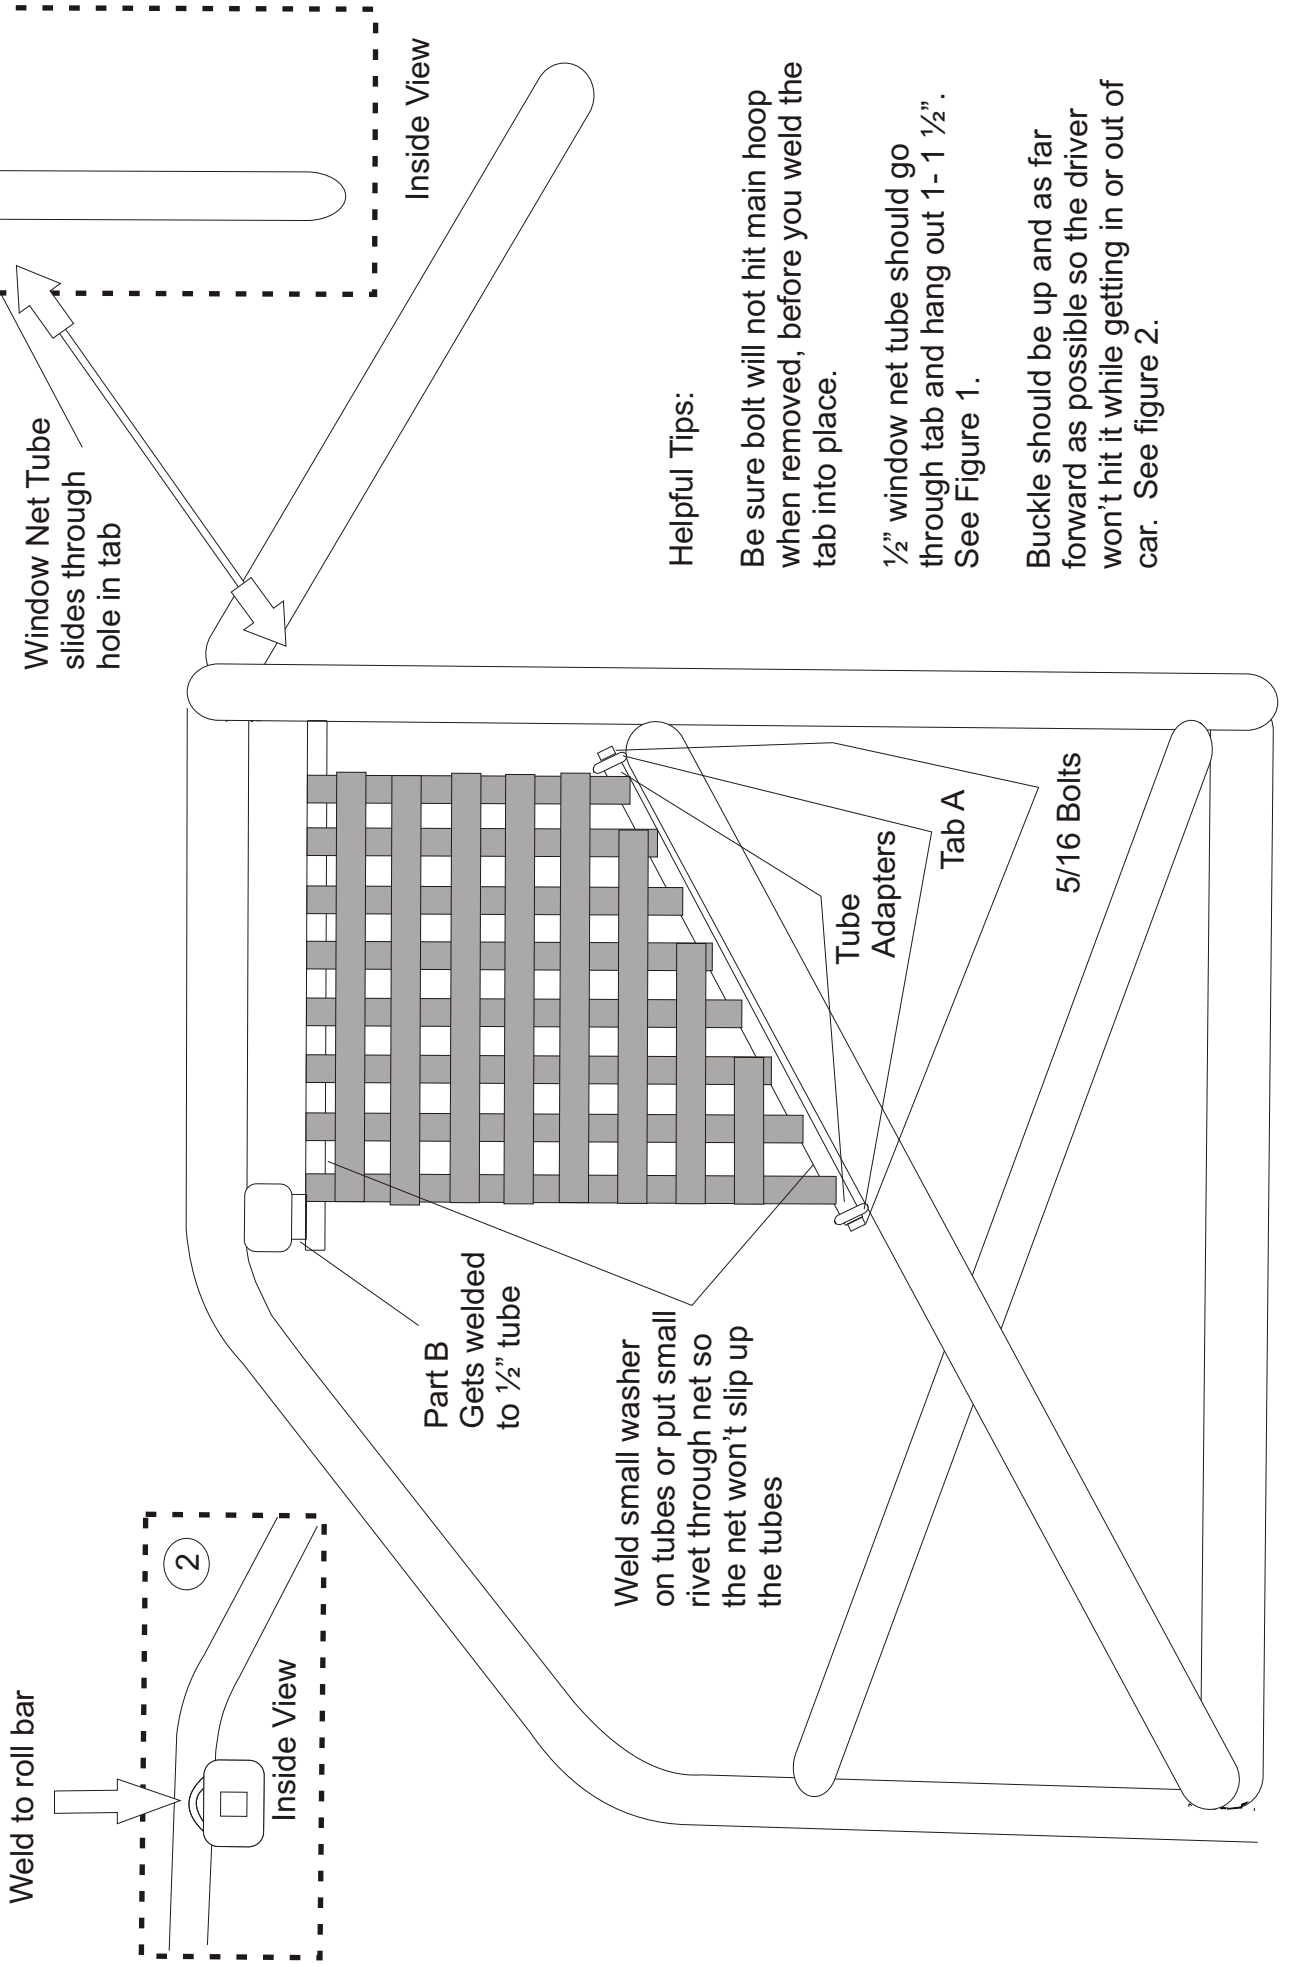

Helpful Tips:

Be sure bolt will not hit main hoop when removed, before you weld the tab into place.

1/2" window net tube should go through tab and hang out 1- 1/2". See Figure 1.

Buckle should be up and as far forward as possible so the driver won't hit it while getting in or out of car. See figure 2.